






R77

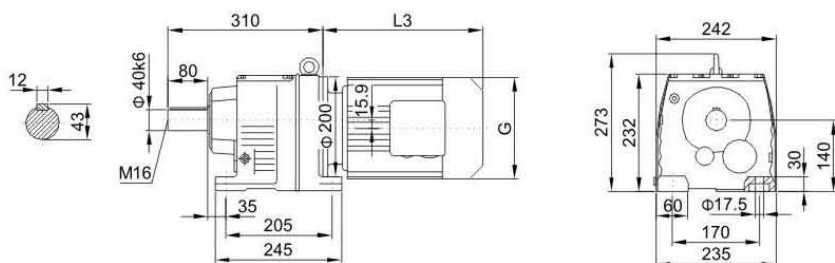


电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

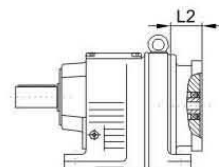


RF77

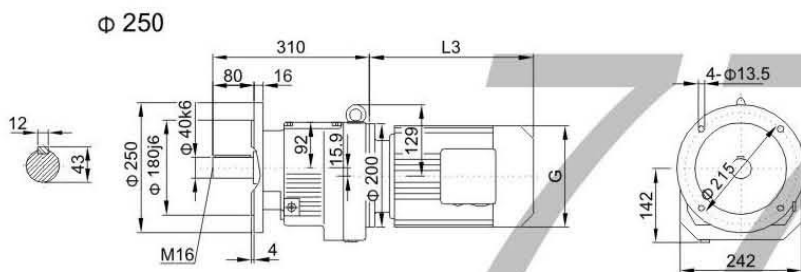

R..S77

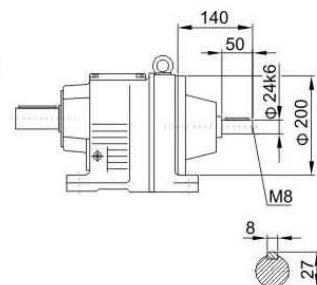

R..77R37

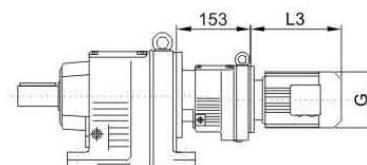


注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y ₂ 电机机座号 Motor size	63	71	80	90S	90L	100L	112M	132S	132M	160M
功率/4P Power/(kW)	0.18	0.25 0.37	0.55 0.75	1.1	1.5	2.2 3.0	4.0	5.5	7.5	11
L3	223	233	278	304	328	350	380	425	461	524
G	130	145	175	195	195	215	240	275	275	330
L2	81	81	81	81	81	93	93	101	101	126


注：“R..”表示R、RF

Note：“R..”mean R、RF


R87

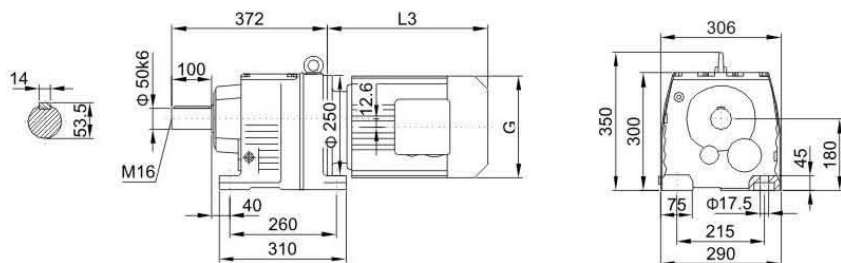


电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

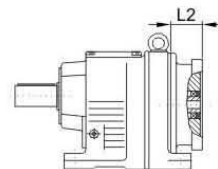


RF87

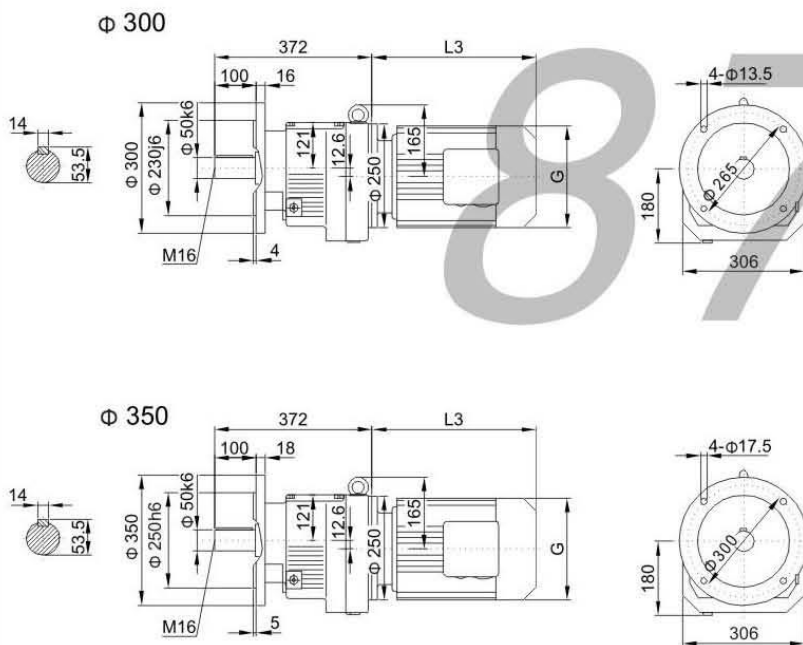

R..S87

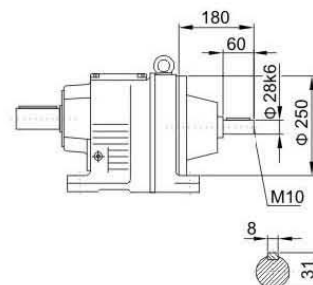

R..87R57

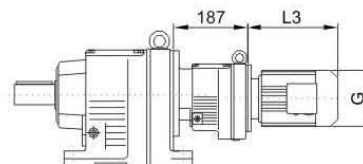

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y ₂ 电机机座号 Motor size	80	90S	90L	100	112M	132S	132M	160M	160L	180M	180L
功率/4P Power/(kW)	0.55 0.75	1.1	1.5	2.2 3.0	4.0	5.5	7.5	11	15	18.5	22
L3	246	280	304	350	380	425	461	524	547	583	616
G	175	195	195	215	240	275	275	330	330	380	380
L2	86	86	86	71	71	101	101	126	126	126	126


注：“R..”表示R、RF

Note：“R..”mean R、RF


R




R97

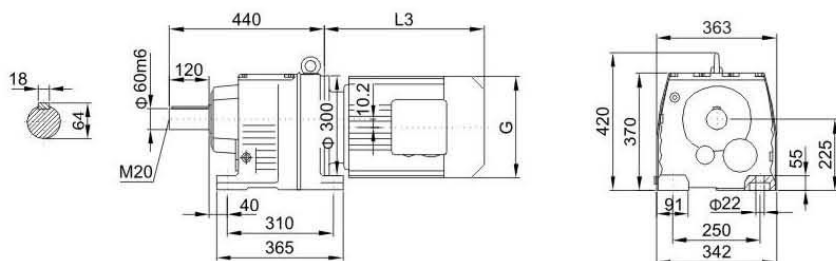


电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

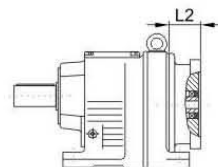


RF97

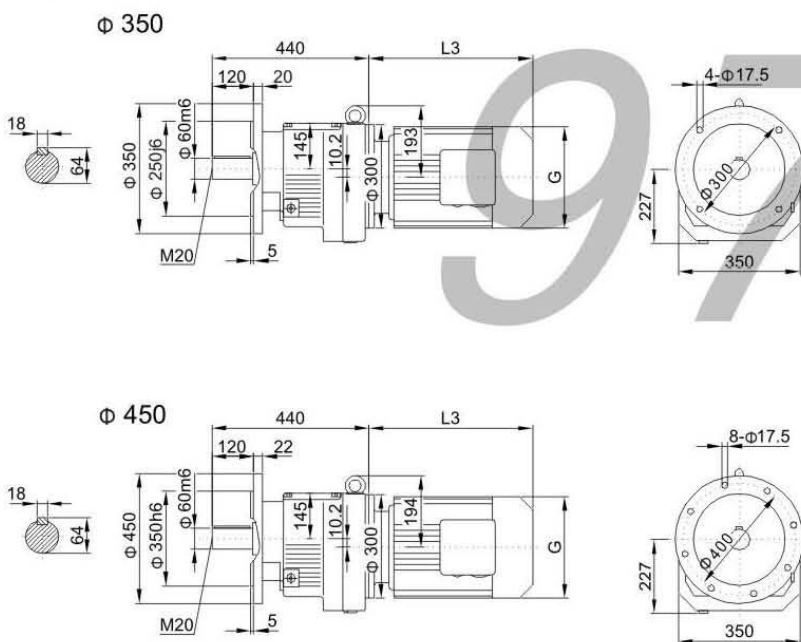

R..S97

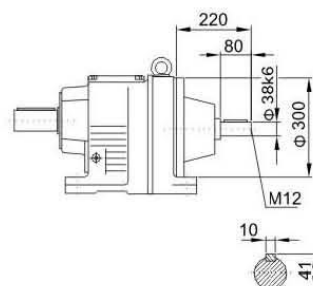

R..97R57

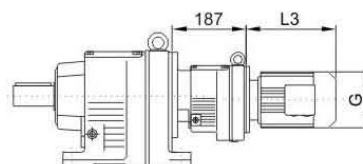


注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y2电机机座号 Motor size 功率/4P Power/(kW)	80	90S	90L	100	112M	132S	132M	160M	160L	180M	180L	200	
L3	246	280	304	315	334	425	461	524	547	555	588	654	
G	175	195	195	215	240	275	275	330	330	380	380	420	
L2	86	86	86	101	101	101	101	126	126	126	126	132	


注：“R..”表示R、RF

Note：“R..”mean R、RF

R107

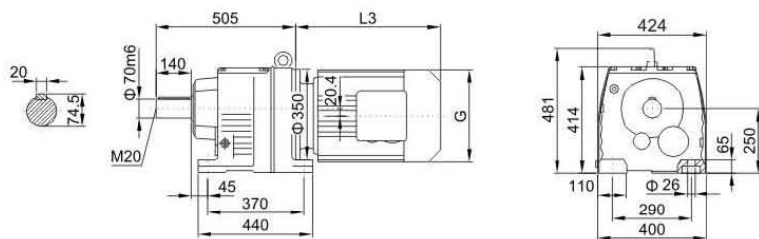




电机需方配时或配特殊电机时需加联接法兰
When equipping the users motor or the special one, the flange is required to be connected.

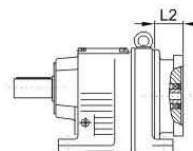

R..S107




RF107

Φ 350

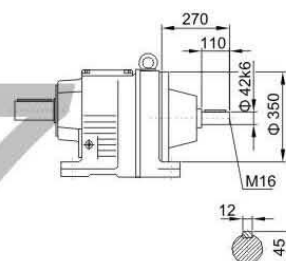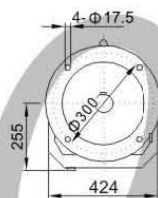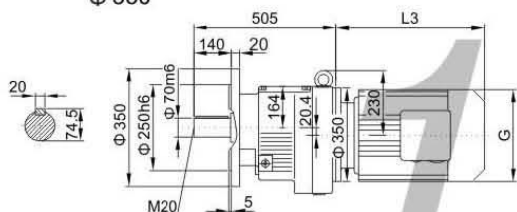

R..107R77

Φ 450

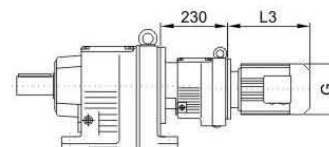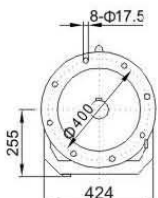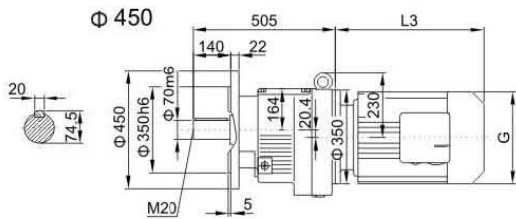

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y2电机座号 Motor size	100	112M	132S	132M	160M	160L	180M	180L	200	225S	225M	
功率/4P Power/(kW)	2.2	3.0	4.0	5.5	7.5	11	15	18.5	22	30	37	45
L3	318	334	386	422	504	519	555	588	654	680	702	
G	215	240	275	275	330	330	380	380	420	470	470	
L2	101	101	101	101	126	126	126	126	132	132	132	


注：“R..”表示R、RF

Note: “R..” mean R、RF


R




R137

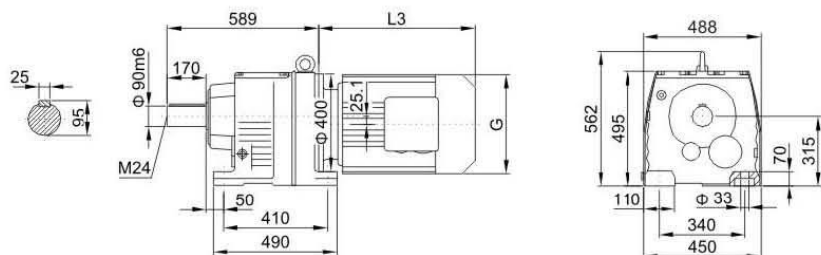


电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

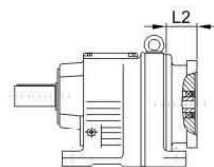



RF137

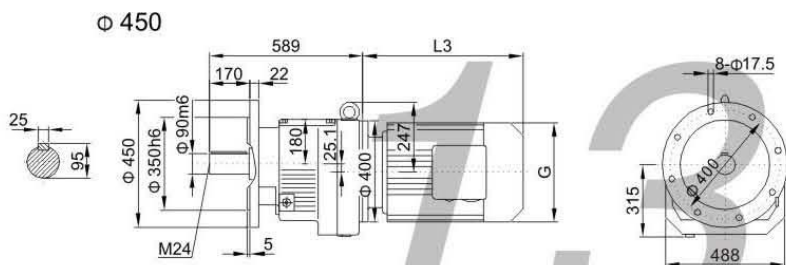

R..S137

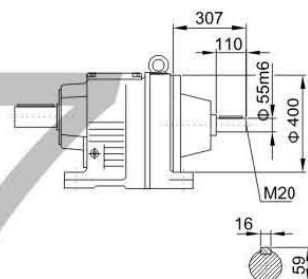

R..137R77

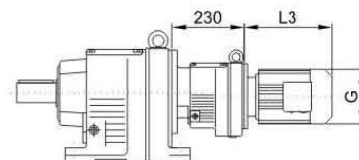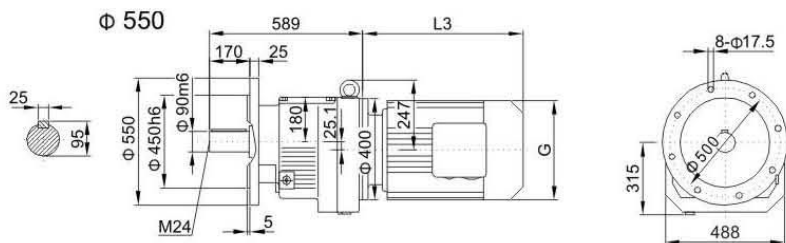

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure


Y2电机机座号 Motor size	132S	132M	160M	160L	180M	180L	200	225S	225M	250	
功率/4P Power/(kW)	5.5	7.5	11	15	18.5	22	30	37	45	55	
L3	388	424	476	519	555	588	654	680	702	771	
G	275	275	330	330	380	380	420	470	470	510	
L2	126	126	132	132	132	132	132	143	143	174	

注：“R..”表示R、RF


Note: “R..” mean R、RF




R147

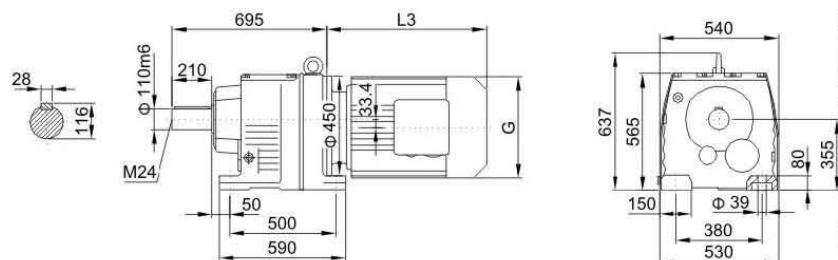


电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

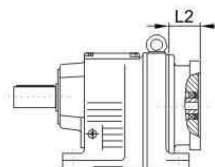



RF147

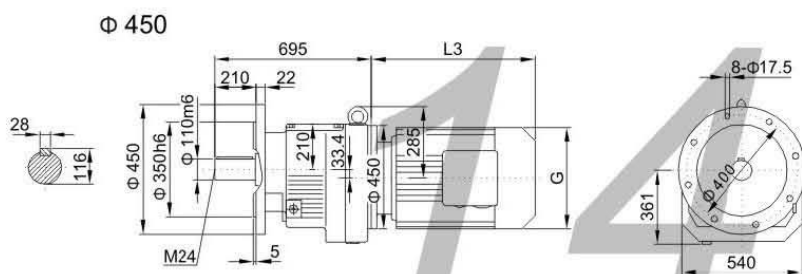

R..S147

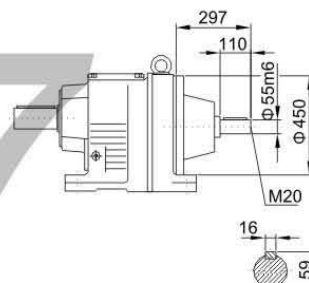

R..147R87(R77)

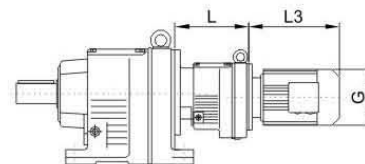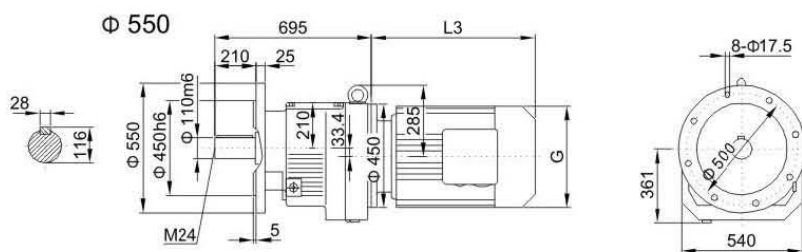

	R..147R77组合	R..147R87组合
L	230	275

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y2电机座号 Motor size	160M	160L	180M	180L	200	225S	225M	250	280S	280M	
功率/4P Power/(kW)	11	15	18.5	22	30	37	45	55	75	90	
L3	567	602	583	616	654	674	696	775	845	845	
G	330	330	380	380	420	470	470	510	580	580	
L2	132	132	132	132	132	143	143	174	174	174	

注：“R..”表示R、RF


Note: “R..” mean R、RF

R




外形安装尺寸 Mounting Dimension Sheets-overview


R167

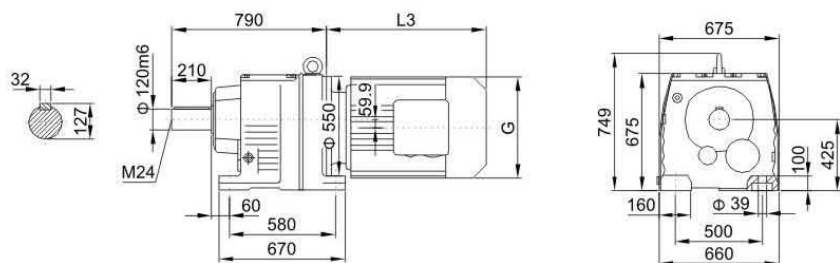


电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

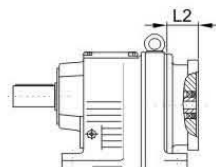


RF167

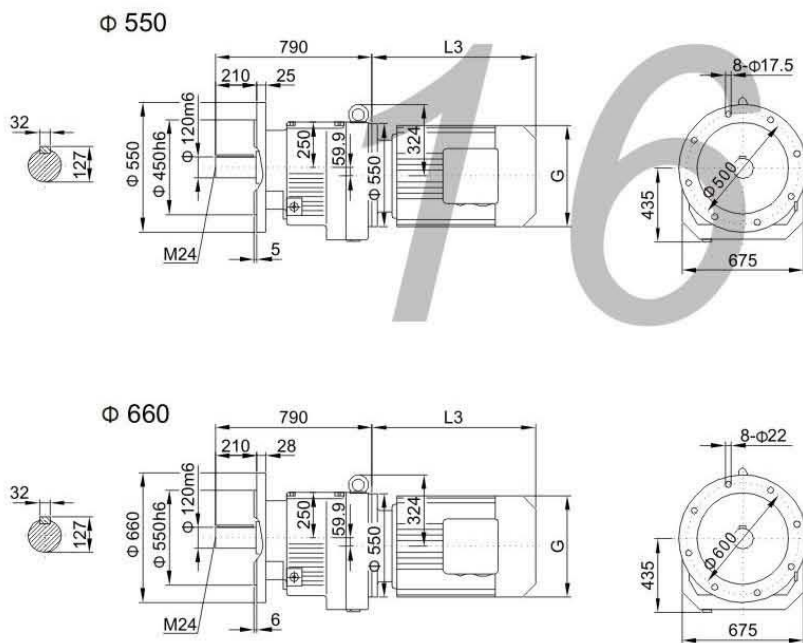

R..S167

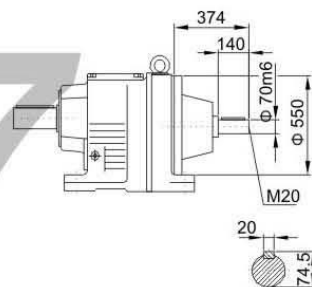

R..167R97(R107)

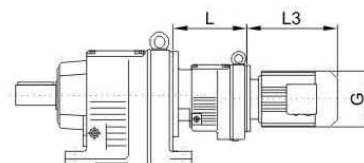

	R..167R97组合	R..167R107组合
L	320	370

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y2电机机座号 Motor size	160M	160L	180M	180L	200	225S	225M	250	280S	280M	315S	315M	315L
功率/4P Power/(kW)	11	15	18.5	22	30	37	45	55	75	90	110	132	160
L3	567	602	635	666	642	669	691	770	828	879	1100	1130	1360
G	330	330	380	380	420	470	470	510	580	580	645	645	645
L2	143	143	143	143	143	143	143	113	113	113	113	145	145

注：“R..”表示R、RF

Note: “R..” mean R、RF